

How to Patch the MacPaloma to work on a MP850 (MacPaloma+)

We recommend, that this work should only be done by skilled persons. Otherwise the functionality of the MacPaloma could be affected. In this case no warranty is granted.

(0. Remove the MacPaloma from your Computer)


1. Remove the IC VPX3220 from the socket.

2. Connect Pin 12 with Pin 19 in the socket (see Pic 1 and Pic 2)


3. Remove Pin 12 from the socket (**recommended**) or from the VPX3220.

4. Put the IC back into the socket. Pin 12 of the IC must not have any contact to Pin 12 of the socket .

(5. Build in the MacPaloma to your computer)

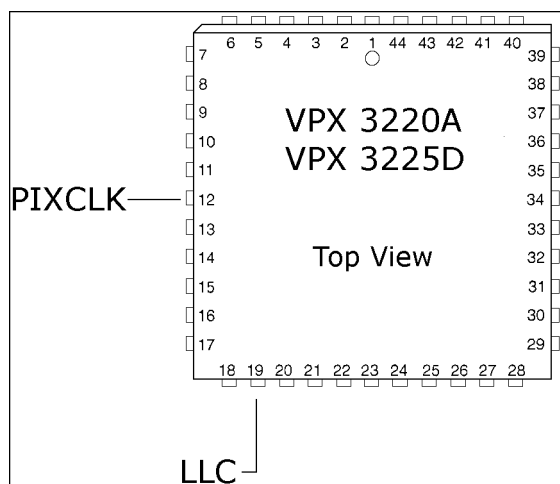

Picture 1: Pins of the VPX

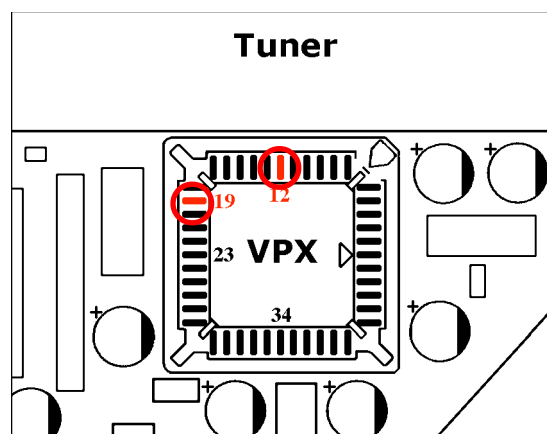

Picture 2: Part of the MacPaloma